


ACADIA HOOK


luca+lex

HKMB2, HKBN2, HKPC2, HKBB2

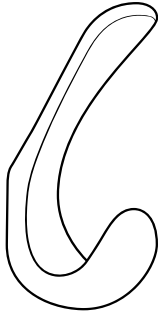


INCLUDED HARDWARE

Wall Anchors, Screws
Allen Wrench, Set Screw

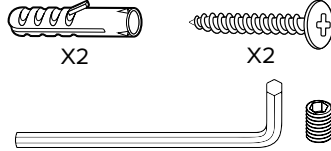

TOOLS YOU MAY NEED:

Phillips head screwdriver, Hammer
Pencil, Level, Tape Measure, Drill

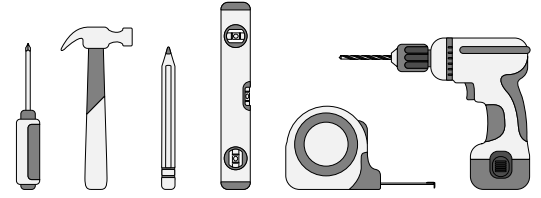

STEP 1:


- Locate hanging hardware before discarding any packaging.

STEP 2:

- Determine installation location. **CAUTION:** Do not install where the product might be used as a grab or support bar.
- For best results, always install into a wall stud. If a stud is not available, install using wall anchors
- Measure & level in desired location.


STEP 3:

- Position the wall mount bracket as shown
- Mark the anchor and/or screw placement using a pencil through the wall mount bracket.

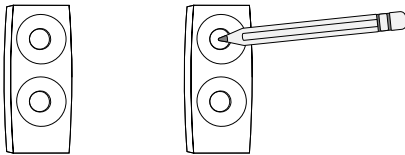

STEP 5:


- Fasten hook over wall mount bracket & tighten set screw at the bottom with allen wrench.

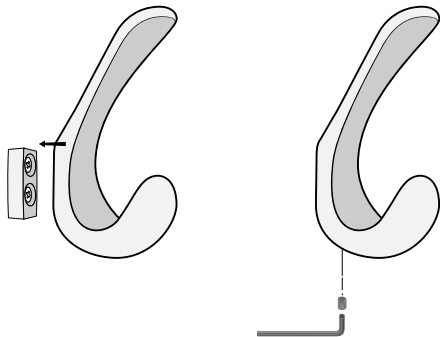

STEP 4:

SOLID WOOD OR STUD MOUNT:

- Fasten screws through wall mount bracket.

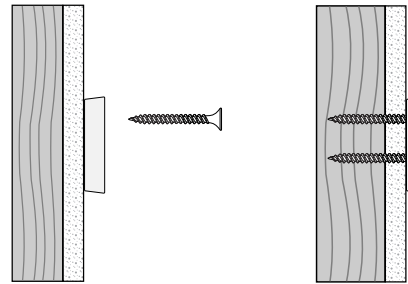

DRYWALL MOUNT:

- Drill pilot holes and insert plastic anchors into drilled holes using a hammer to tap the anchors flush with the wall. Be careful when tapping not to damage the anchor or surrounding wall.
- Position wall mount brackets over installed anchors.
- Fasten screws through the wall mount bracket into anchors.

Make sure to follow these steps for all holes in the wall mount bracket for secure installation.

