


# ACADIA TOILET PAPER HOLDER


luca+lex

TPMB2, TPBN2, TPPC2, TPBB2

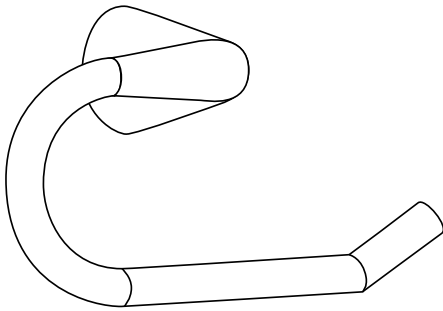


## INCLUDED HARDWARE

Wall Anchors, Screws  
Allen Wrench, Set Screw

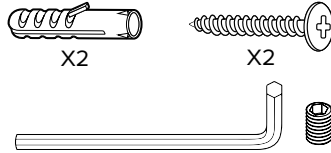

## TOOLS YOU MAY NEED:

Phillips head screwdriver, Hammer  
Pencil, Level, Tape Measure, Drill

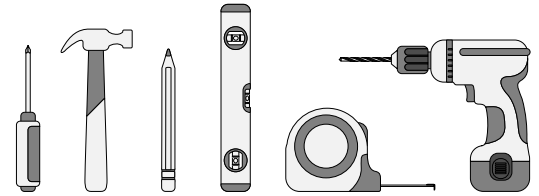

### STEP 1:


- Locate hanging hardware before discarding any packaging.

### STEP 2:

- Determine installation location. **CAUTION:** Do not install where the product might be used as a grab or support bar.
- For best results, always install into a wall stud. If a stud is not available, install using wall anchors
- Measure & level in desired location.


### STEP 3:

- Position the wall mount bracket as shown
- Mark the anchor and/or screw placement using a pencil through the wall mount brackets.

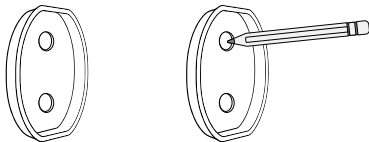

### STEP 5:


- Fasten toilet paper holder over wall mount bracket & tighten set screw at the bottom with allen wrench.

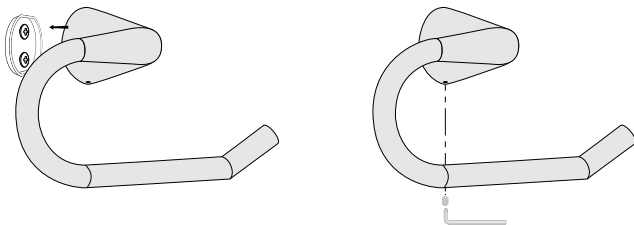

### STEP 4:

#### SOLID WOOD OR STUD MOUNT:

- Fasten screws through wall mount bracket.

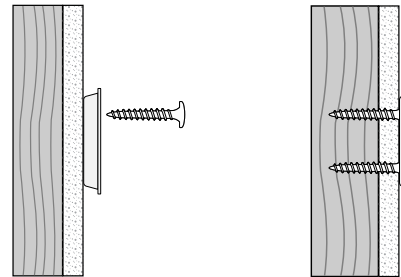

#### DRYWALL MOUNT:

- Drill pilot holes and insert plastic anchors into drilled holes using a hammer to tap the anchors flush with the wall. Be careful when tapping not to damage the anchor or surrounding wall.
  - Position wall mount brackets over installed anchors.
  - Fasten screws through the wall mount bracket into anchors.
- Make sure to follow these steps for all holes in the wall mount bracket for secure installation.**

